



REMOTE CONTROLLER **OWNER'S MANUAL**



climaproyectos
.com

Carrier is committed for continuous improvement of Carrier products according to national and international standards to ensure the highest quality and reliability standards, and to meet market regulations and requirements. All specifications subject to change without prior notice according to Carrier policy of continuous development.

1611700000574
2016.02.16

CONTENT

1. QUICK START	2
2. DISPLAY AND BUTTONS	3
2.1 Display	3
2.2 Buttons	4
3. HOW TO USE BASIC FUNCTIONS	5
3.1 Basic Operation	5
3.2 Timer Function	6
4. HOW TO USE ADVANCED FUNCTIONS	7

CAUTION

INSTRUCTIONS OF USING WIRELESS REMOTE CONTROL


- The remote control uses two alkaline batteries (1.5 Volts).
- Do not use old batteries or batteries of different types, as this may cause the controller malfunction.
- If you do not use the remote control for more than two months, please remove the batteries. Other wise battery leakage may damage the remote control.
- The average battery life during normal use is approximately half a year. Replace the batteries when there is no receiving beep coming from the indoor unit or transmission indicator ▲ on the remote control fails to light.
- The maximum operating distance for the remote control is approximately 8 meters.
- The transmitter of remote control must be directed toward the receiver of indoor unit when pressing the buttons of the desired functions. An acoustical acknowledgement sound (beep) will indicate that signal has been received.
- Avoid obstacles obstructions such as curtains, doors or other materials between the remote control and the receiver of indoor unit to avoid blocking the signals from the remote control to the indoor unit.
- Avoid direct sunlight on the receiver of indoor unit, which may interfere with good signal reception and the air conditioner may not work properly. Draw the curtains to avoid direct sunlight.
- Keep the remote control away from water. Do not let the remote control fall down.
- Never use objects with sharp point to press the button on the remote control.
- Prevent any liquid from falling into the remote control.
- If other electric applications react to the remote control, move these applications.
- Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.




Correct Disposal of Battery

- This marking printed in the batteries attached to your Air Conditioning product is information for end-users according to the EU directive 2013/56/EU article 20 annex II.
 - Batteries, at their end-of-life, should be disposed of separately from general household waste. Please, dispose of batteries correctly at your local community waste collection or the recycling center.


1. QUICK START

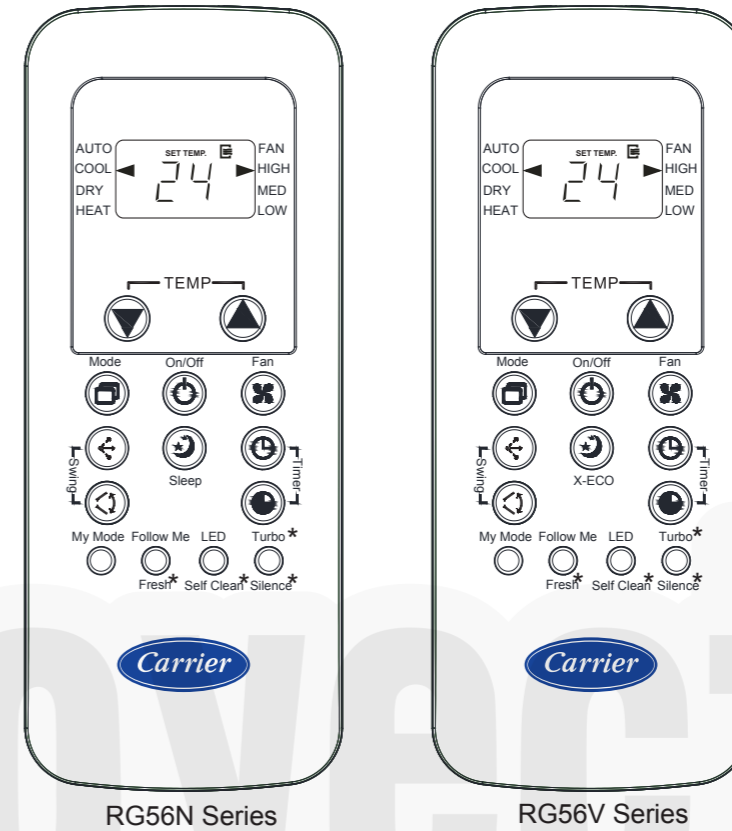


* Optional Functions:
 The function is not available on the actual remote controller or not workable for the air conditioner.

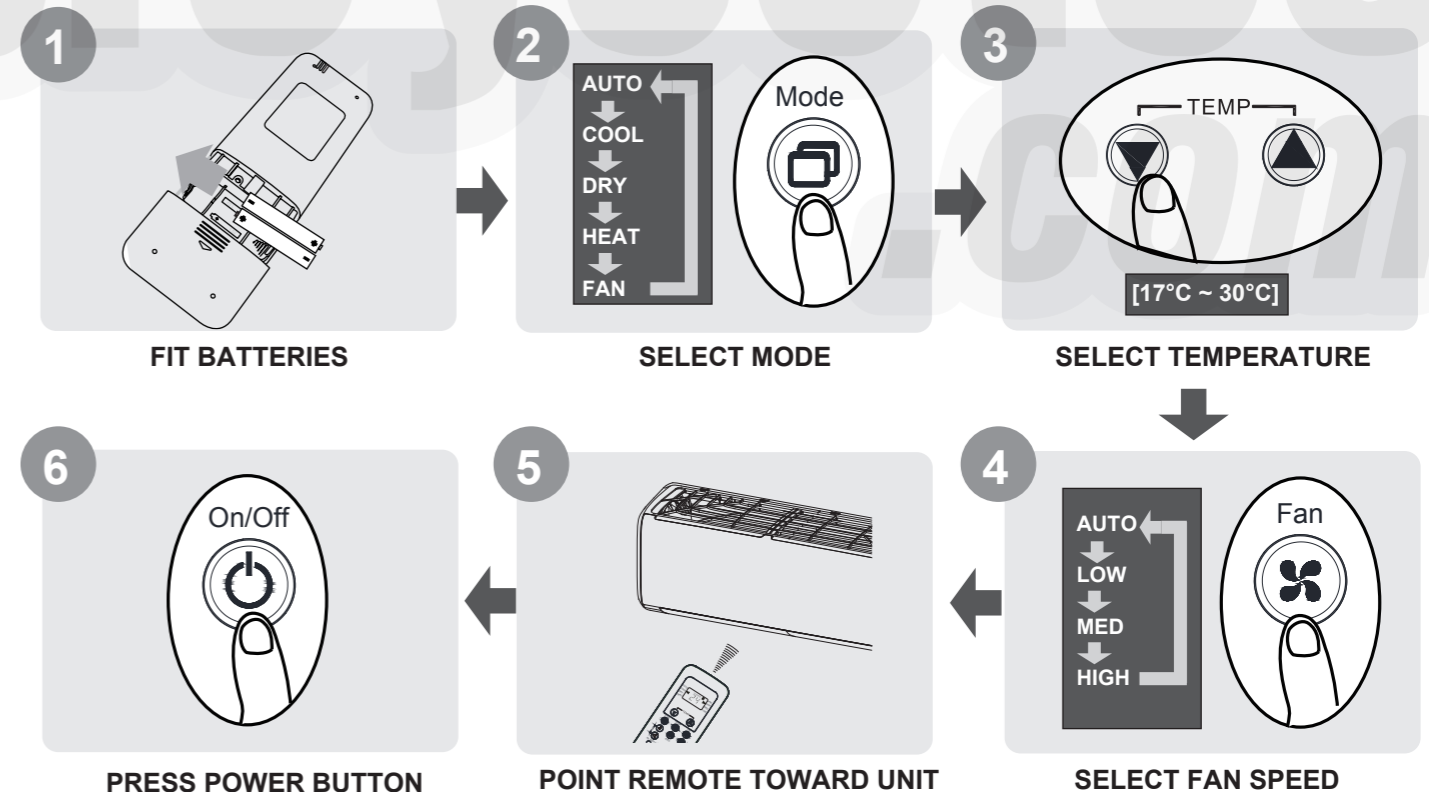

2.1 DISPLAY

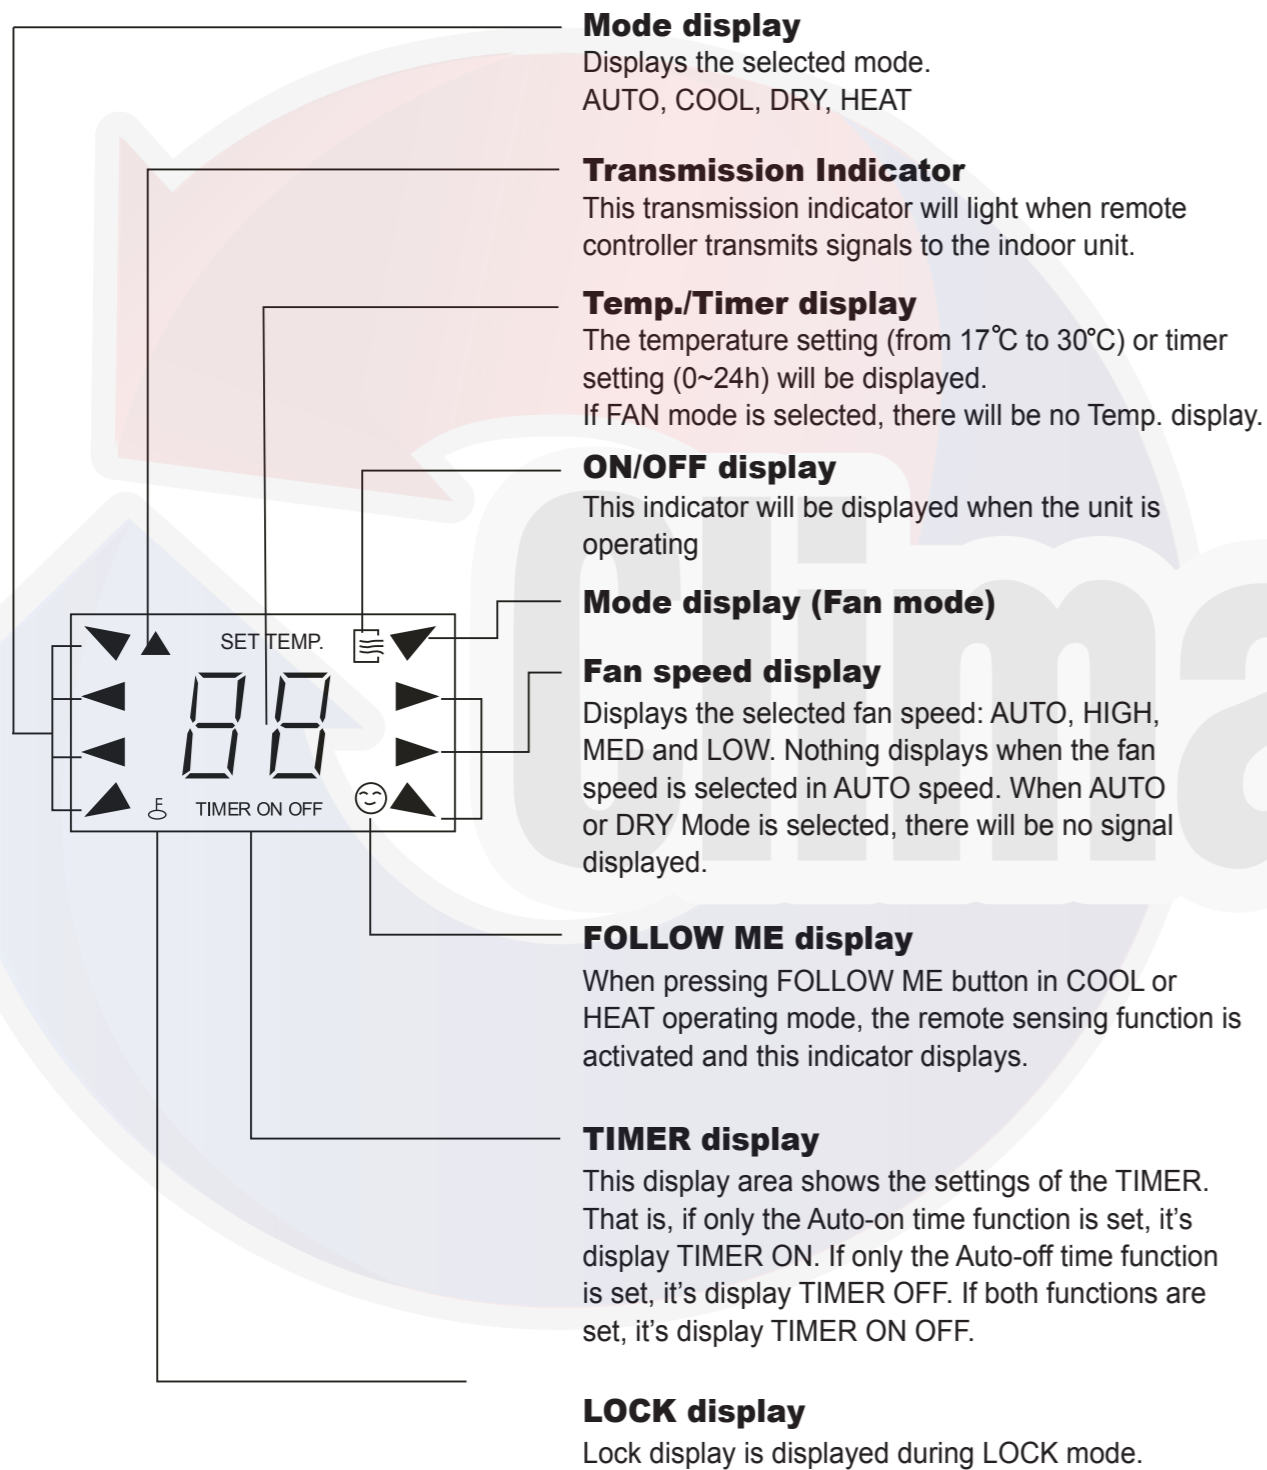

2.2 BUTTONS

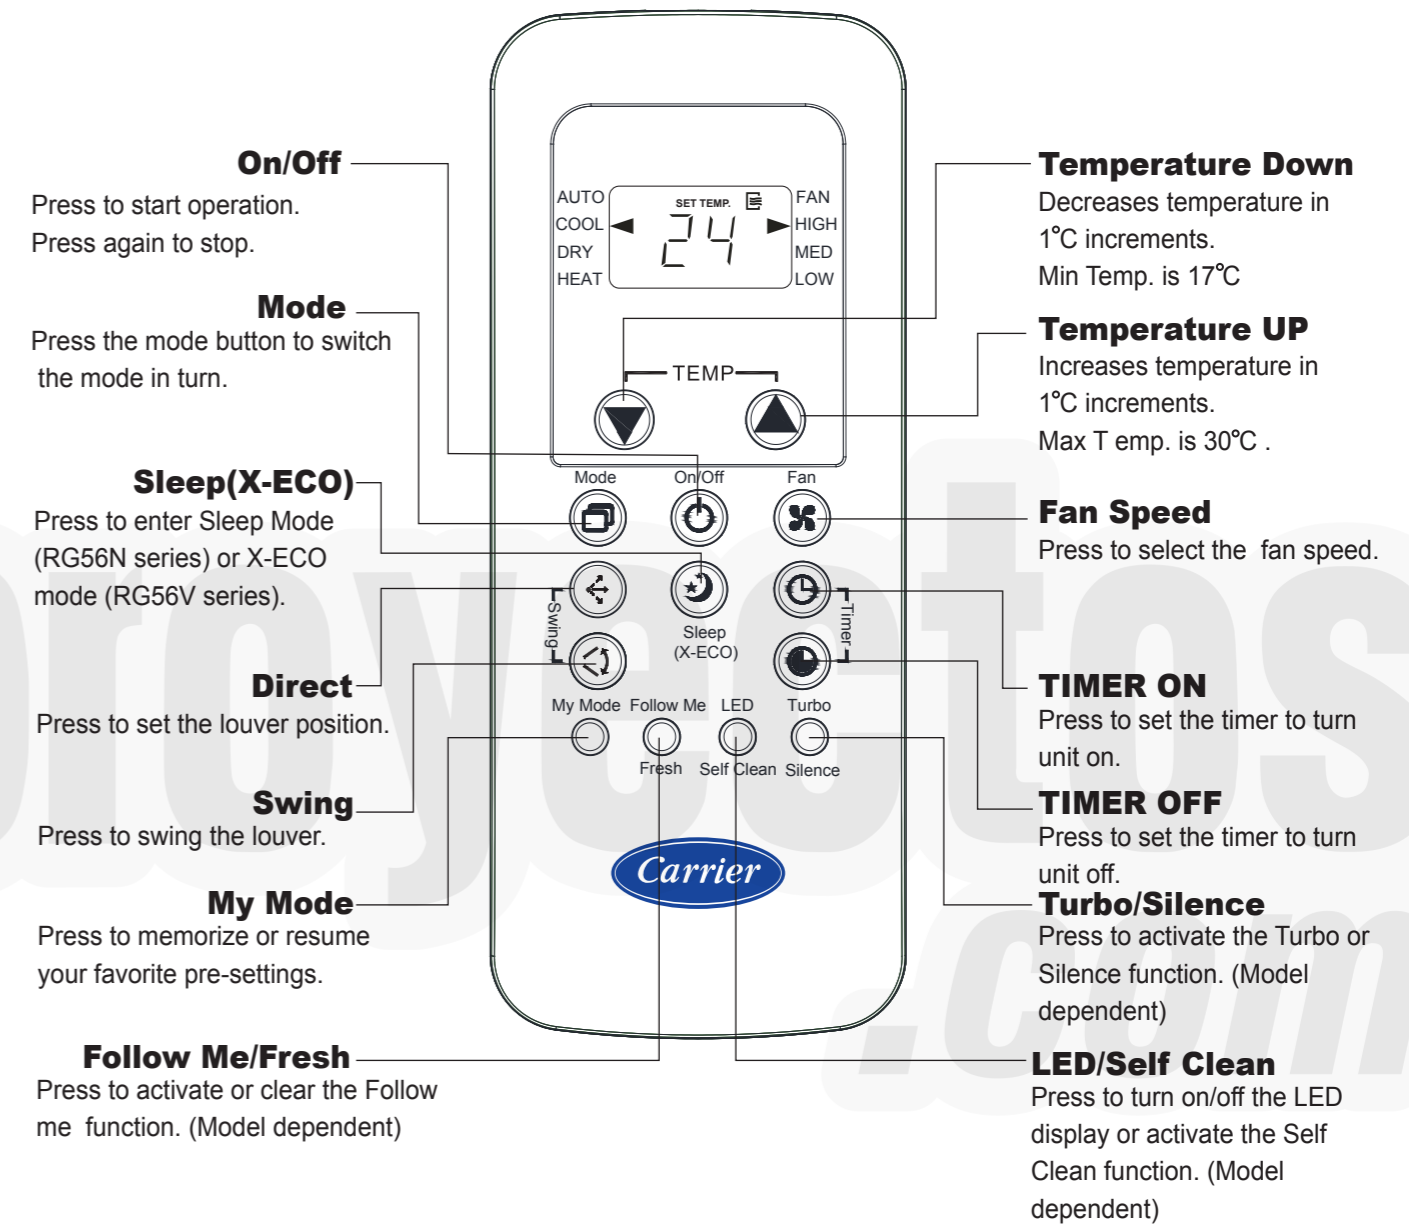


NOTE:

1. Above illustration shows all the features. For actual model, only the relevant parts are shown.
2. Buttons design might be slightly different from the actual one.

HOW TO USE BASIC FUNCTIONS



3.1 BASIC OPERATIONS

! ATTENTION Before operation, please ensure the unit is plugged in and power is available.

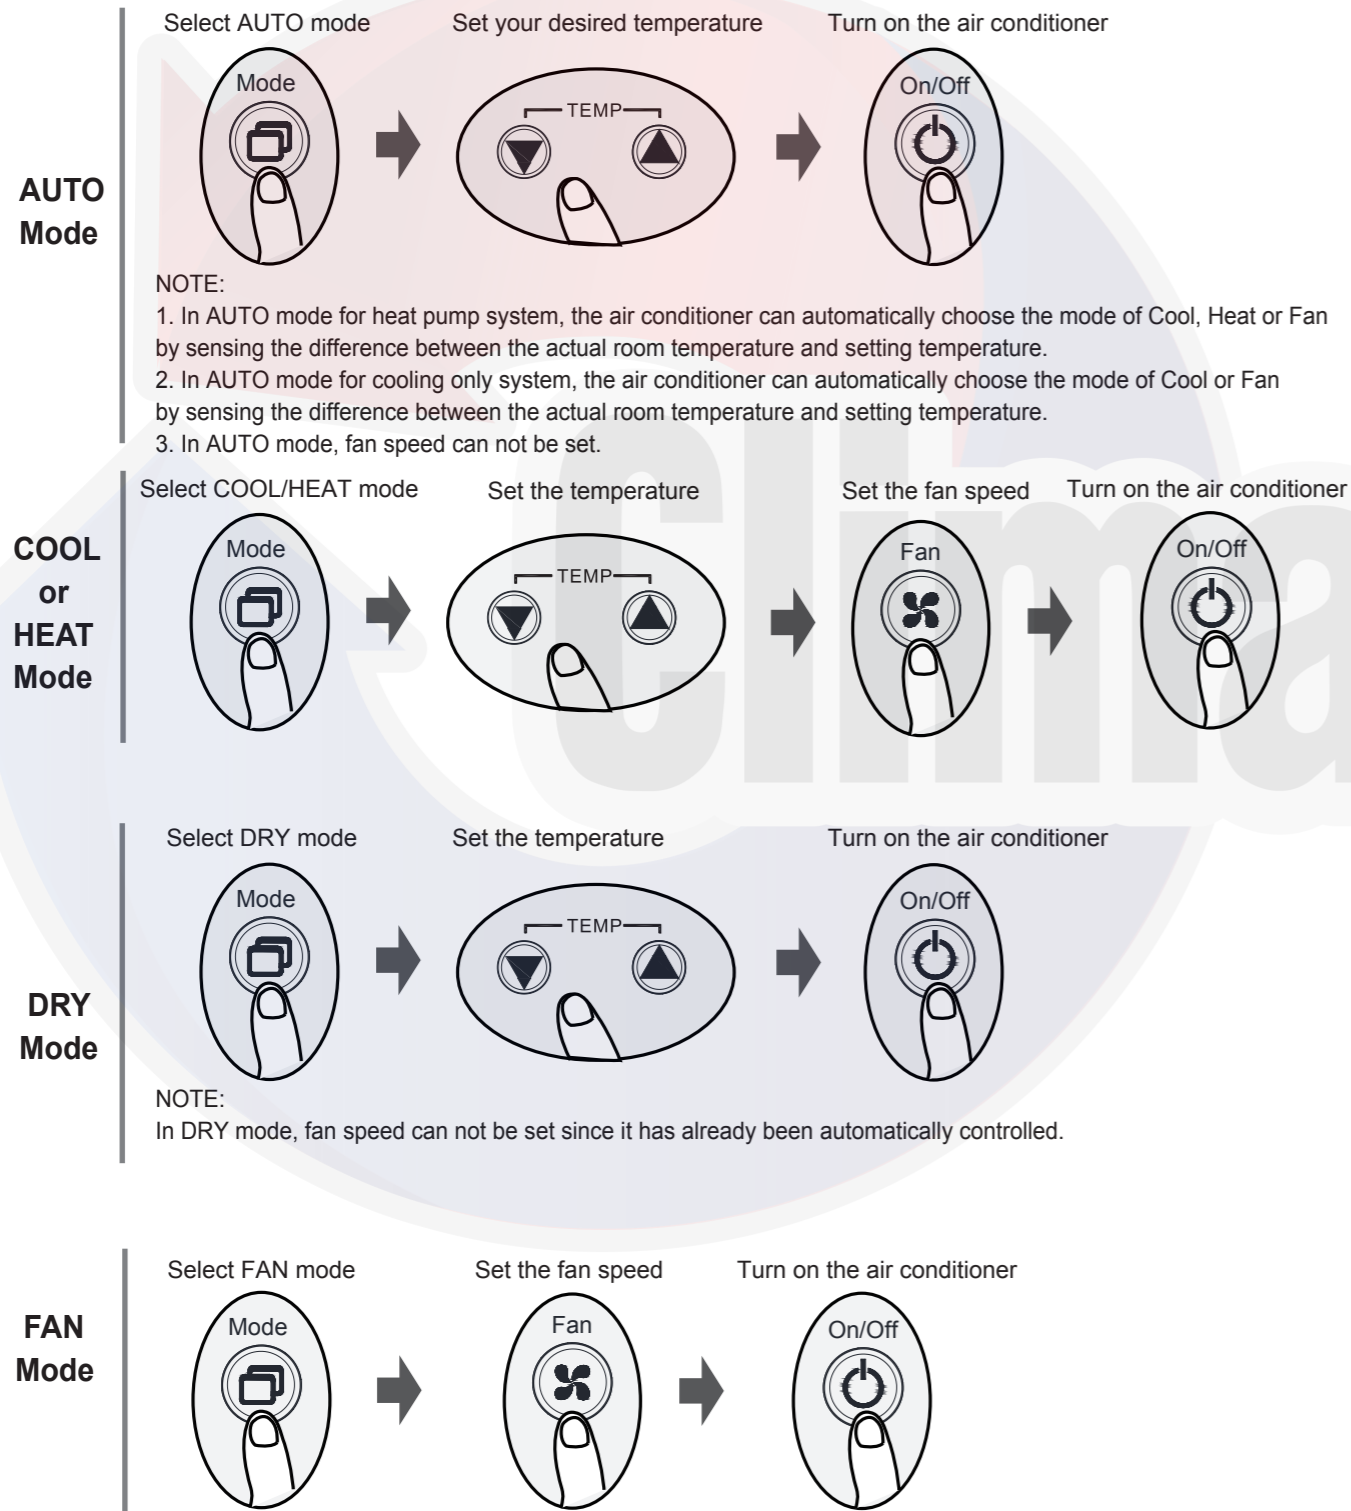

3.2 TIMER FUNCTION



TIMER ON/OFF - Set the amount of time after which the unit will automatically turn on/off.

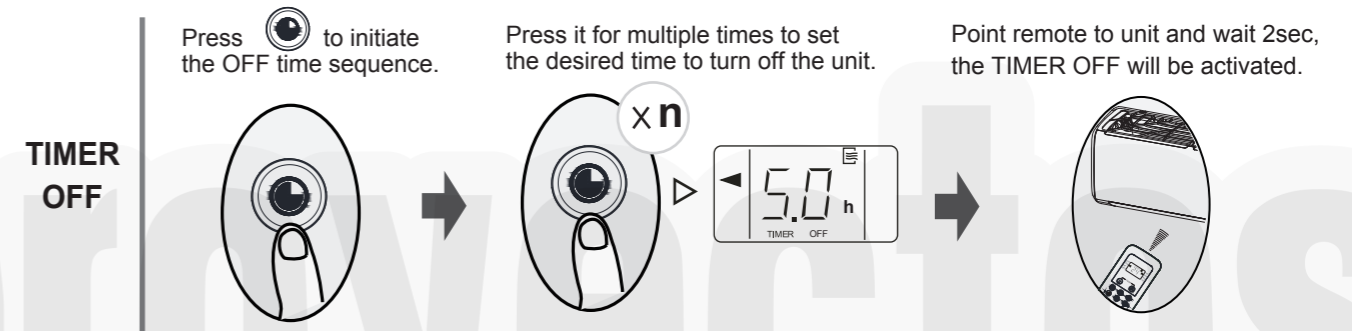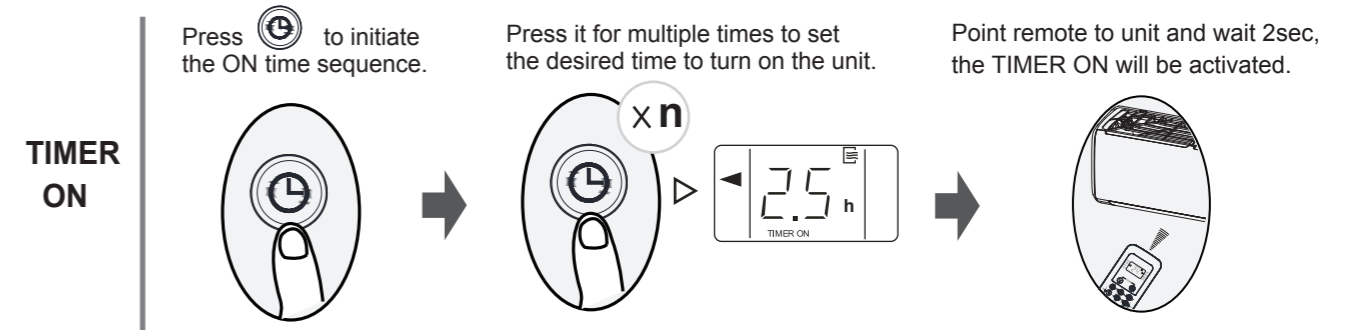

NOTE:

- When setting the TIMER ON or TIMER OFF, the time will increase by 30 minutes increments with each press, up to 10 hours. After 10 hours and up to 24, it will increase in 1 hour increments. (For example, press 5 times to get 2.5h, and press 21 times to get 11h.) The timer will revert to 0.0 after 24.
- Cancel either function by setting its timer to 0.0h.

Setting TIMER ON & OFF (example).

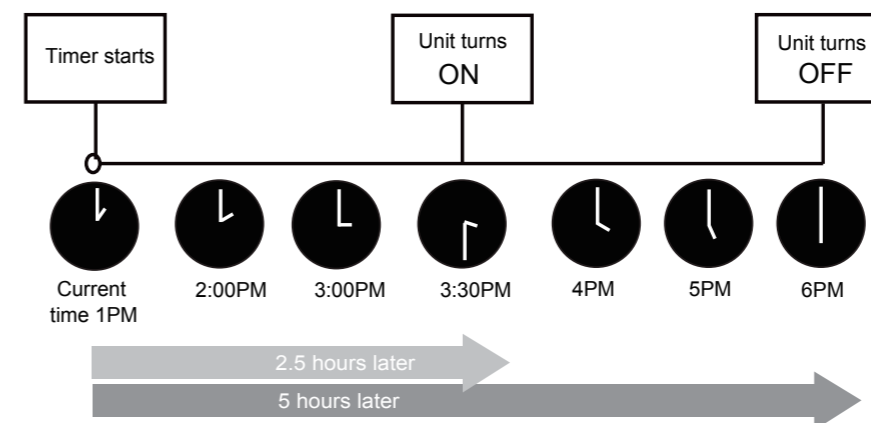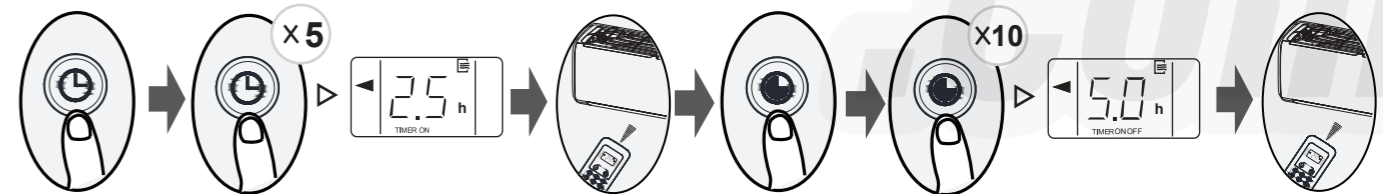


Example: If current timer is 1:00PM, to set the timer as above steps, the unit will turn on 2.5h later (3:30PM) and turn off at 6:00PM.

HOW TO USE ADVANCED FUNCTIONS

Direct


Press Direct button

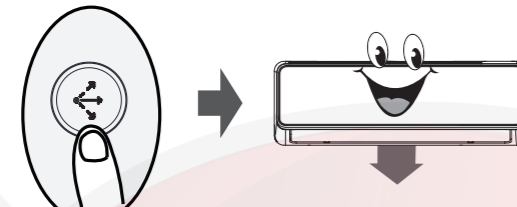

The horizontal louver will move an angle of 6 degree for each press. Press the button until the louver reach your prefer location.


Swing

Press Swing button

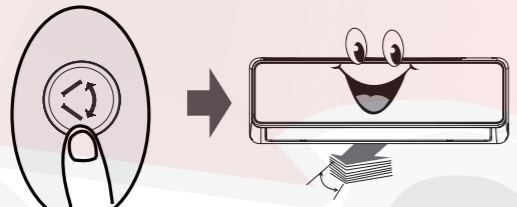

The horizontal louver will swing up and down automatically when pressing Swing button. Press again to make it stop.


Press Swing button for more than 2 sec

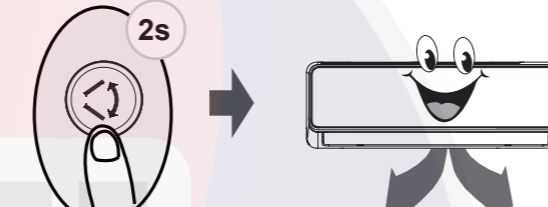

Keep pressing this button more than 2 seconds, the vertical louver swing function is activated. (Model dependent)

Sleep

Press Sleep button (RG56N) under Cool/Heat mode




The set temp. will increase (cooling) or decrease (heating) by 1°C per hour for the first 2hs. Thereafter it keeps this new temp. for 5hs before switching off.

This Sleep operation saves energy and improves night time comfort by synchronising with the body's metabolism.


X-ECO or Sleep

Press X-ECO button (RG56V) under Cool mode



The unit will automatically regular the fan speed and compressor speed. The temp. can be selected from 24~30°C in ECO mode. The function will be disable after 8hs.

Press more than 2 seconds under Cool/Heat operate mode for Sleep




The set temp. will increase (cooling) or decrease (heating) by 1°C per hour for the first 2hs. Thereafter it keeps this new temp. for 5hs before switching off.

This X-ECO and Sleep operation saves energy and improves night time comfort by synchronising with the body's metabolism.
Note: The X-ECO function is invalid for multi system.


My Mode

Press this button more than 2 seconds

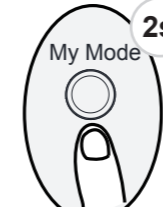

The unit will memorize the current setting mode, Temp., fan).

Press this button

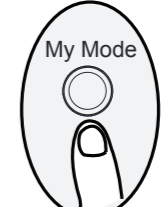


The unit will restore to the setting you made last time.

My mode function enable you to memorize or restore your favorite settings (mode, temperature and fan speed). The default memorized setting is AUTO mode, 26°C and AUTO fan.

Follow Me or Fresh


Press this button under COOL or HEAT operating Mode



The controller will display the actual temp. at its location and send this signal to indoor unit every 3 minutes

Press this button to activate Follow me. This function can adjust room temperature base on the controller's sensor and make you comfort.
Note: Please put the controller in the location where can ensure the indoor unit can receive the signal.

Press this button more than 2 seconds

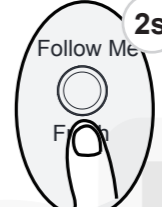


The ionizer or Plasma dust collector (model dependent) is energized.

Keep pressing this button more than 2 seconds, the fresh function is activated and will help to remove pollen and impurities from the air. (Model dependent)


LED or Self Clean

Press LED button

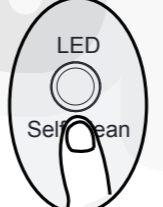

Press this button to turn on and turn off the display on the indoor unit.

Press this button under COOL or DRY Mode more than 2 seconds




The unit will enter low fan mode to dry up the coil. The cleaning cycle takes 15~30 mins, after which the unit will turn off automatically.

Keep pressing this button more than 2 seconds, the unit will clean itself to avoid bacteria grow around heat (CI dependent)

Turbo or Silence


Press this button

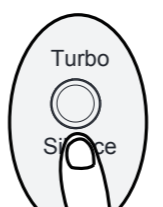

The unit will operate at the biggest capacity output to reach the setting Temp. quickly.

Press this button to activate Turbo. It enables the unit to reach the set temperature in the shortest time. Press it again to disable it.

Press this button more than 2 seconds

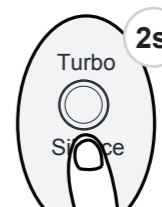


The unit will bring faint breeze to reduce the noise to the lowest level.

Keep pressing this button more than 2 seconds, the Silence function is activated. (Model dependent)
Note: Due to low speed of operation, it may result in insufficient cooling and heating capacity.

HOW TO USE ADVANCED FUNCTIONS

F.P. Press this button 2 times under HEAT Mode and 17°C

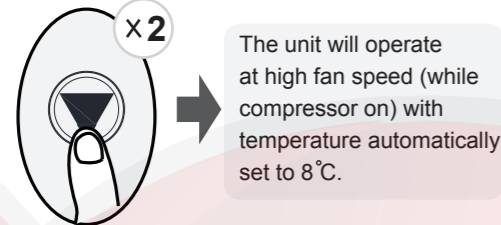

Note: This function for heat pump air conditioner.

Press this button 2 times under HEAT Mode and 17°C to activate the freeze protection function. It will help to keep the room above 0°C (freezing point) in severe cold winter.

Press On/Off, Sleep, Mode, Fan and Temp. button while operating will cancel this function.

Lock Mode 1 Press together Direct button and Swing button at the same time more than 2 seconds to activate Lock Mode 1 function.




Enter lock mode 1 by pressing Direct and Swing button at the same time more than 2 seconds. At lock mode 1, all buttons will not response except press these two buttons again to disable locking.

Lock Mode 2 Press together TIMER ON button and TIMER OFF button at the same time more than 2 seconds to activate lock mode 2 function.



Enter lock mode 2 by pressing TIMER ON and TIMER OFF button at the same time more than 2 seconds. At lock mode 2, all buttons will not response except press ON/OFF, TEMP UP and DOWN buttons or press these two buttons again to disable locking.

Cool Only Press together Mode button and Fan button at the same time more than 2 seconds.

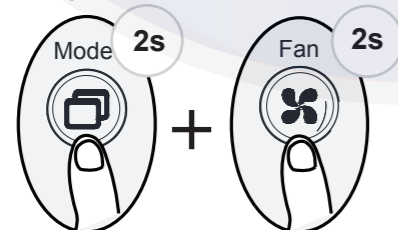

Disable the HEAT mode by pressing Mode and Fan buttons at the same time more than 2 seconds.
Recover the HEAT mode by pressing Mode and Fan buttons at the same time more than 2 seconds again.